



JANUS
INTERNATIONAL GROUP

JANUS INTERNATIONAL GROUP LLC

135 JANUS INTERNATIONAL BLVD.
TEMPLE, GA 30179


PHONE (770) 562-2850 / FAX (770) 562-1991

www.janusintl.com

750 INSTALLATION GUIDE

Release Date: 06/12/2026

810002-0001

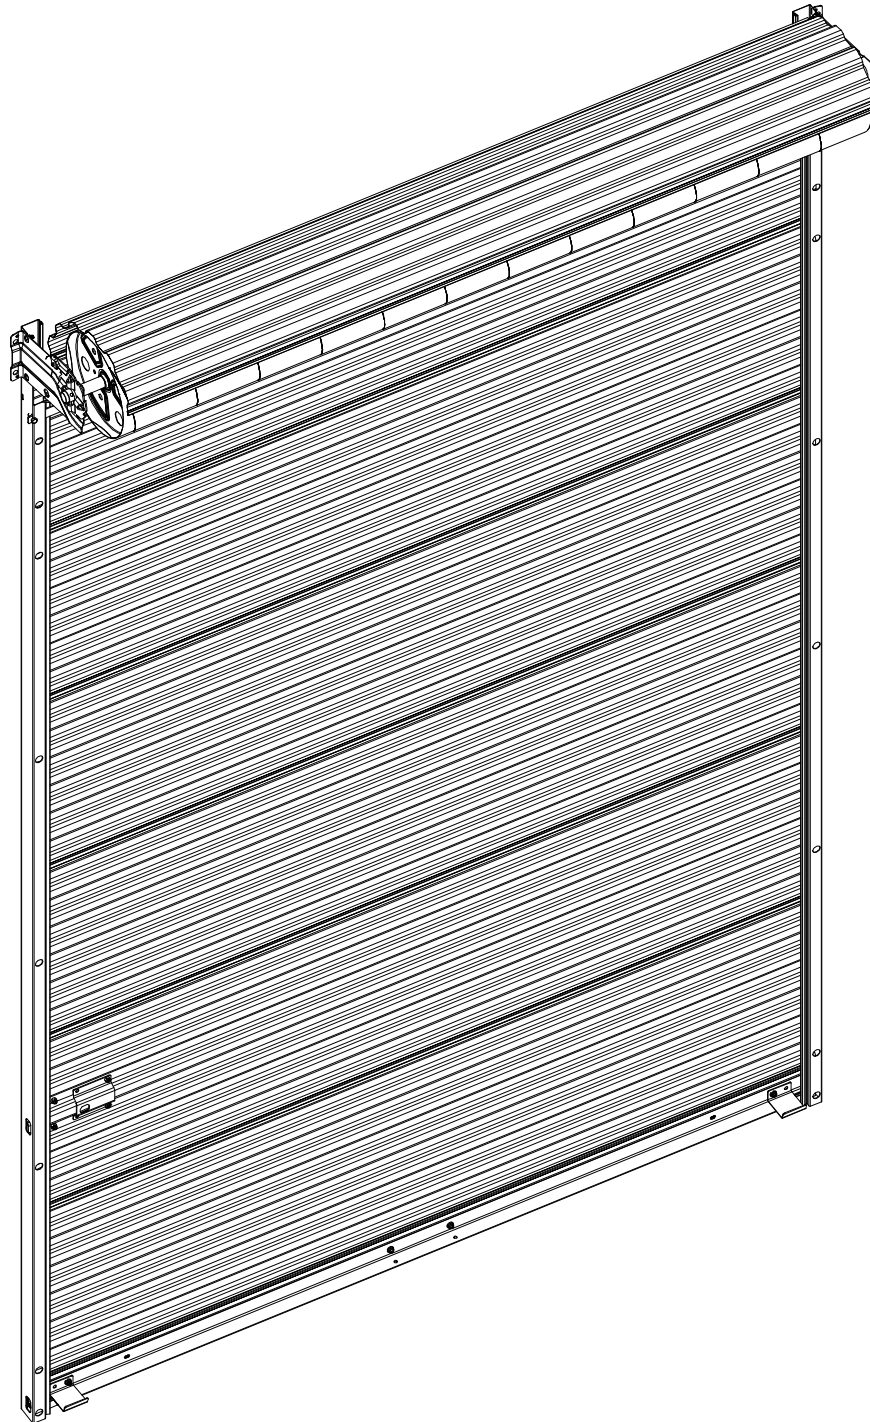

IMPORTANT INFORMATION

JANUS INTERNATIONAL DOORS MUST BE INSTALLED BY TRAINED ROLLING DOOR TECHNICIANS QUALIFIED TO INSTALL PRODUCT SAFELY WITH PROPER KNOWLEDGE, TOOLS, SAFETY AND INSTALLATION EQUIPMENT. CAREFULLY READ INSTALLATION INSTRUCTIONS. FAMILIARIZE YOURSELF WITH ALL INSTALLATION PROCEDURES, WARNINGS, CAUTIONS, AND NOTES BEFORE ATTEMPTING TO INSTALL DOOR. JANUS INTERNATIONAL CORPORATION WILL NOT WARRANTY OR ACCEPT RESPONSIBILITY FOR DOORS NOT INSTALLED PER THESE INSTALLATION INSTRUCTIONS.

- IMPORTANT SAFETY INFORMATION -

- CAREFULLY READ INSTALLATION INSTRUCTIONS. FAMILIARIZE YOURSELF WITH ALL INSTALLATION PROCEDURES, WARNINGS, CAUTIONS, AND NOTES BEFORE ATTEMPTING TO INSTALL DOOR.
- INSPECT RECEIVED DOOR ASSEMBLY FOR VISIBLE DAMAGE AND/OR COMPONENT SHORTAGES.
 - a. SHIPPING DAMAGE: FILE DAMAGE CLAIM IMMEDIATELY WITH FREIGHT CARRIER. SUPPLY DOOR SUPPLIER WITH PHOTO DOCUMENTATION TO RECEIVE REPLACEMENT COMPONENTS.
 - b. PART SHORTAGE: IMMEDIATELY CONTACT DOOR SUPPLIER WITH PARTS SHORTAGE CLAIM. ORDER NUMBER, DOOR MODEL, PHOTO DOCUMENTATION ARE ENCOURAGED TO EXPEDITE PROCESS.
 - c. INCORRECT PARTS: IF RECEIVED DOOR COMPONENTS AND PARTS DO NOT MATCH THOSE REFERENCED IN THESE INSTALLATION INSTRUCTIONS, IMMEDIATELY CONTACT DOOR SUPPLIER.
- IF AT ANY TIME BEFORE OR DURING INSTALLATION YOU ARE UNFAMILIAR, UNCOMFORTABLE, OR CONFUSED BY INSTALLATION PROCEDURES OUTLINED IN THESE INSTALLATION INSTRUCTIONS DO NOT ATTEMPT TO INSTALL DOOR ASSEMBLY. IMMEDIATELY CONTACT DOOR SUPPLIER WITH QUESTIONS/CONCERNS.

JANUS INTERNATIONAL DOORS MUST BE INSTALLED BY TRAINED ROLLING DOOR TECHNICIANS QUALIFIED TO INSTALL PRODUCT SAFELY WITH PROPER KNOWLEDGE, TOOLS, SAFETY AND INSTALLATION EQUIPMENT.

- READ ALL WARNINGS BELOW -

- USE APPROPRIATE SAFETY EQUIPMENT TO AVOID SERIOUS INJURY.
- CLEAR FLOOR AT OPENING OF ALL DEBRIS BEFORE INSTALLING PRODUCT.
- USE APPROPRIATE LIFTING EQUIPMENT AND CORRECT LIFTING PROCEDURES TO AVOID DAMAGE, SERIOUS INJURY OR DEATH.
- MOVING DOOR COULD RESULT IN DEATH OR SERIOUS INJURY. DO NOT CLOSE DOOR UNTIL DOORWAY IS CLEAR.
- CONTROL THE SPEED OF THE DOOR DURING MANUAL OPERATION.
- DO NOT STAND OR WALK UNDER A MOVING DOOR.
- KEEP DOORWAY CLEAR AND IN FULL VIEW WHILE OPERATING DOOR.
- DO NOT PERMIT CHILDREN TO PLAY ON, NEAR, OR WITH DOOR, OR OPERATE DOOR CONTROLS.
- UNLOCK DOOR BEFORE OPENING DOOR.
- SENSING DEVICES ON MOTOR OPERATING DOORS SHOULD BE TESTED FREQUENTLY.
- VISUALLY INSPECT DOOR AND HARDWARE MONTHLY FOR WORN AND/OR BROKEN PARTS AND CHECK IF DOOR OPERATES FREELY. DO NOT OPERATE A DOOR WITH A BROKEN SPRING.
- COMPONENTS THAT ARE UNDER EXTREME SPRING TENSION COULD RESULT IN DEATH OR SERIOUS INJURY.
- DOOR MUST BE FULLY OPENED WHEN MAKING ADJUSTMENTS.

► **Retain these instructions for reference.**

► **Operation & Maintenance Manual available via pdf download at www.janusintl.com or upon request.**

HANDLE WITH CARE - DO's & DON'T's

DO's

- CAREFULLY INSPECT ALL PRODUCT FOR DAMAGE UPON RECEIPT.
- USE PROTECTIVE FOAM BETWEEN PRODUCT AND ANY SURFACE OR OBJECT IT MAY COME INTO CONTACT WITH WHILE IN TRANSIT AND/OR STORAGE.
- WHEN SECURING PRODUCT FOR TRANSIT, USE FOAM BARRIER BETWEEN PRODUCT AND STRAPS, ROPES, ETC.
- CAREFULLY UNLOAD PRODUCT FROM ANY TYPE OF CRATING MATERIAL ENSURING NO CONTACT WITH FASTENERS OR SHARP EDGES.
- CLEAR FLOOR AT OPENING OF ALL DEBRIS BEFORE INSTALLING PRODUCT.
- SINGLE PERSON LIFTING OF PRODUCT COULD CAUSE INJURY. USE ASSISTANCE WHEN MOVING OR LIFTING.
- INSTALL PRODUCT WITH APPROPRIATE LIFTING EQUIPMENT ENSURING A PROTECTIVE BARRIER IS MAINTAINED BETWEEN PRODUCT AND ANY SURFACE OR OBJECT IT MAY COME INTO CONTACT WITH

DON'T's

- DO NOT - STAND ON PRODUCT.
- DO NOT - CLIMB ON PRODUCT.
- DO NOT - WALK ON PRODUCT.
- DO NOT - DROP PRODUCT.
- DO NOT - SLIDE PRODUCT ACROSS ANY SURFACE.
- DO NOT - THROW OR TOSS PRODUCT.
- DO NOT - SET OR STACK PRODUCT ON GRAVEL, DEBRIS, OR UNEVEN SURFACES.
- DO NOT - ALLOW SHARP OBJECTS TO COME IN CONTACT WITH PRODUCT.
- DO NOT - LEAVE PRODUCT UNSECURED WHILE IN TRANSIT OR DURING INSTALLATION.

FAILURE TO ADHERE TO THE ABOVE CONDITIONS WILL RESULT IN PERSONAL INJURY OR PRODUCT DAMAGE NOT COVERED UNDER JANUS INTERNATIONAL PRODUCT WARRANTY. ALWAYS HANDLE PRODUCT WITH CARE, AND REVIEW ALL INSTRUCTIONS, WARNINGS, AND NOTES BEFORE INSTALLING PRODUCT.

REVIEW DOOR ASSEMBLY AND GENERAL PARTS DESCRIPTIONS BILL OF MATERIAL FROM PAGE 4, FIGURE 1 TO FAMILIARIZE YOURSELF WITH COMMON PARTS OF ROLLING SHEET DOOR ASSEMBLY.

DOOR ASSEMBLIES ARE MANUFACTURED PER OPENING WIDTHS AND HEIGHTS SPECIFIED AT TIME OF ORDER. JANUS INTERNATIONAL WILL NOT BE HELD RESPONSIBLE FOR OPENING WIDTHS OR HEIGHTS THAT DO NOT MATCH THOSE SPECIFIED AT TIME OF ORDER.

DOOR ASSEMBLY & GENERAL PART DESCRIPTIONS

NON-WINDLOCK VERSION

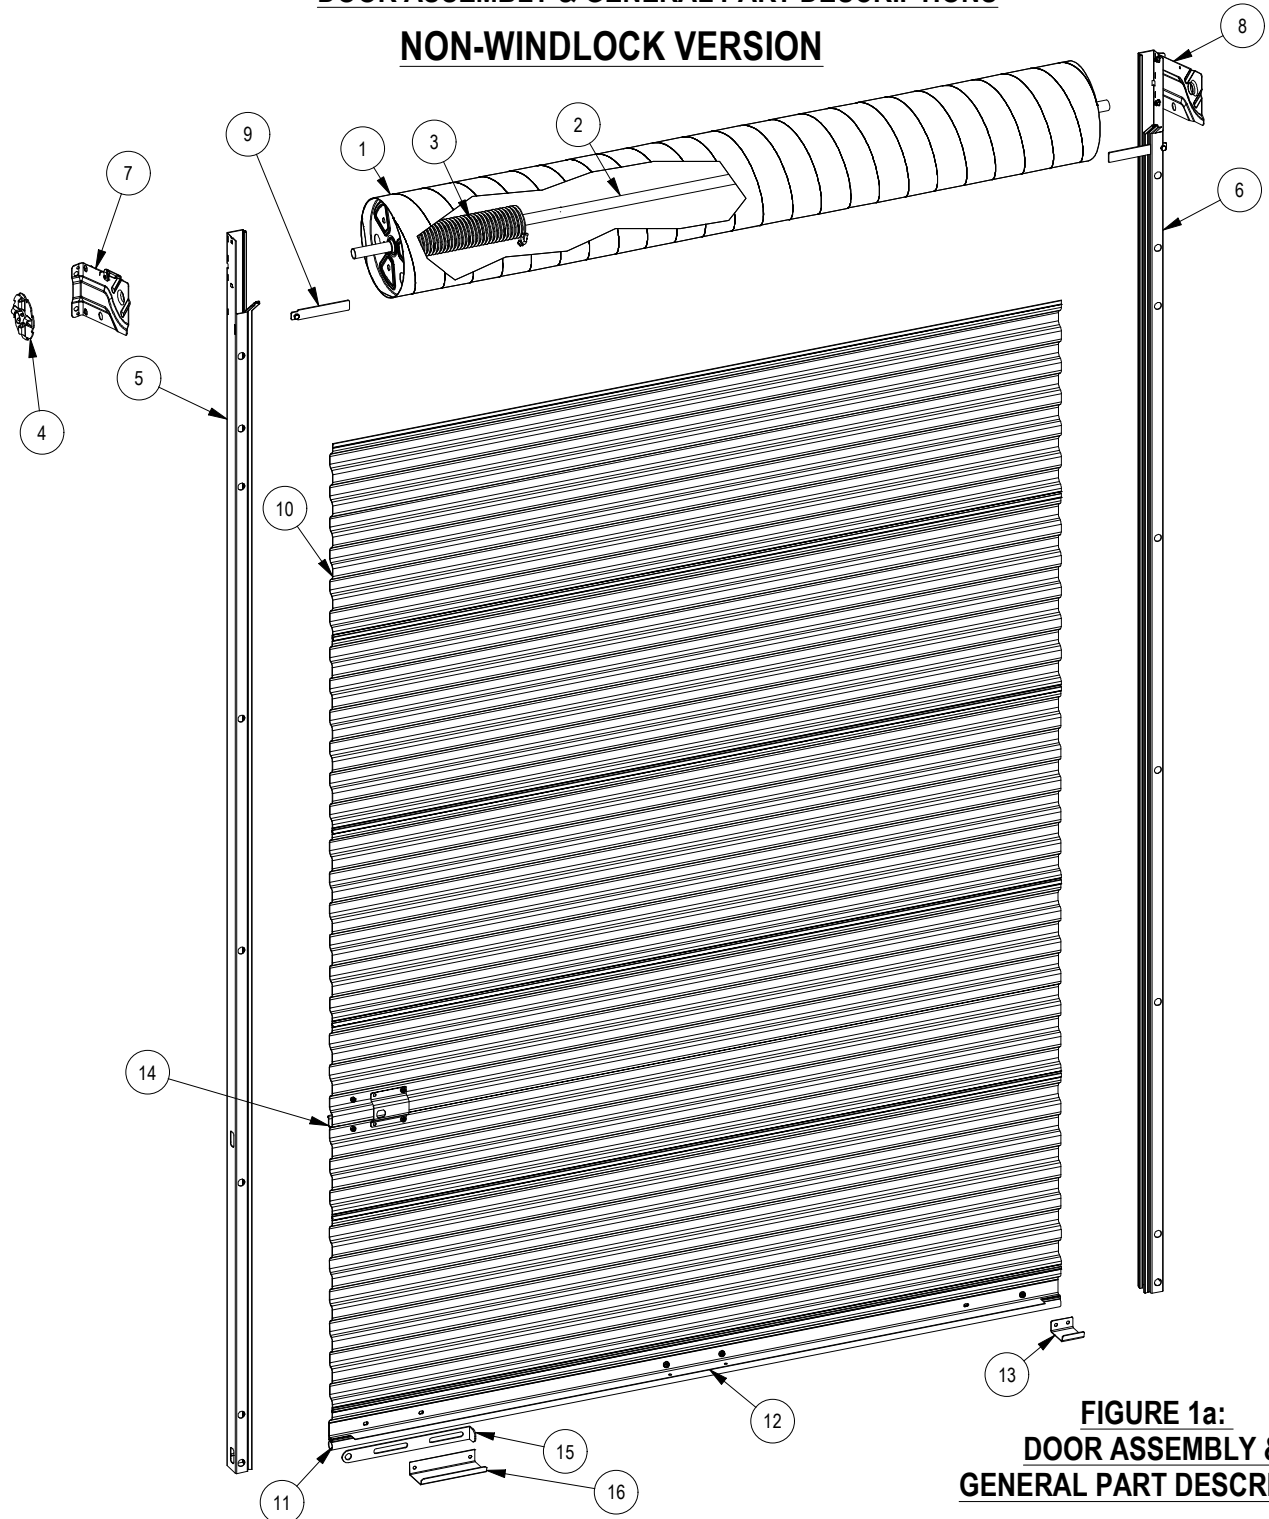



FIGURE 1a:
DOOR ASSEMBLY &
GENERAL PART DESCRIPTION

Operation & Maintenance Manual available via pdf download @ www.janusintl.com or upon request

GENERAL BILL OF MATERIALS

ITEM	DESCRIPTION / PART NUMBER	ITEM	DESCRIPTION / PART NUMBER	ITEM	DESCRIPTION / PART NUMBER
1	9 1/2" Spiral Barrel	7	LH, 16Ga, Mini Bracket	13	Mini Clip
2	1" O.D. Axle	8	RH, 16Ga, Mini Bracket	14	Mini Latch
3	Spring/Counterbalance Assembly	9	Mini Headstop	15	Comm. Step Plate (Optional)
4	Tensioner Ratchet Wheel	10	26 Ga Corrugated Curtain	16	Comm. Slide Lock (Optional)
5	LH, 18Ga, Guide	11	Astragal	17	
6	RH, 18Ga, Guide	12	Bottom Bar Assembly	18	

DOOR ASSEMBLY & GENERAL PART DESCRIPTIONS
WINDLOCK VERSION

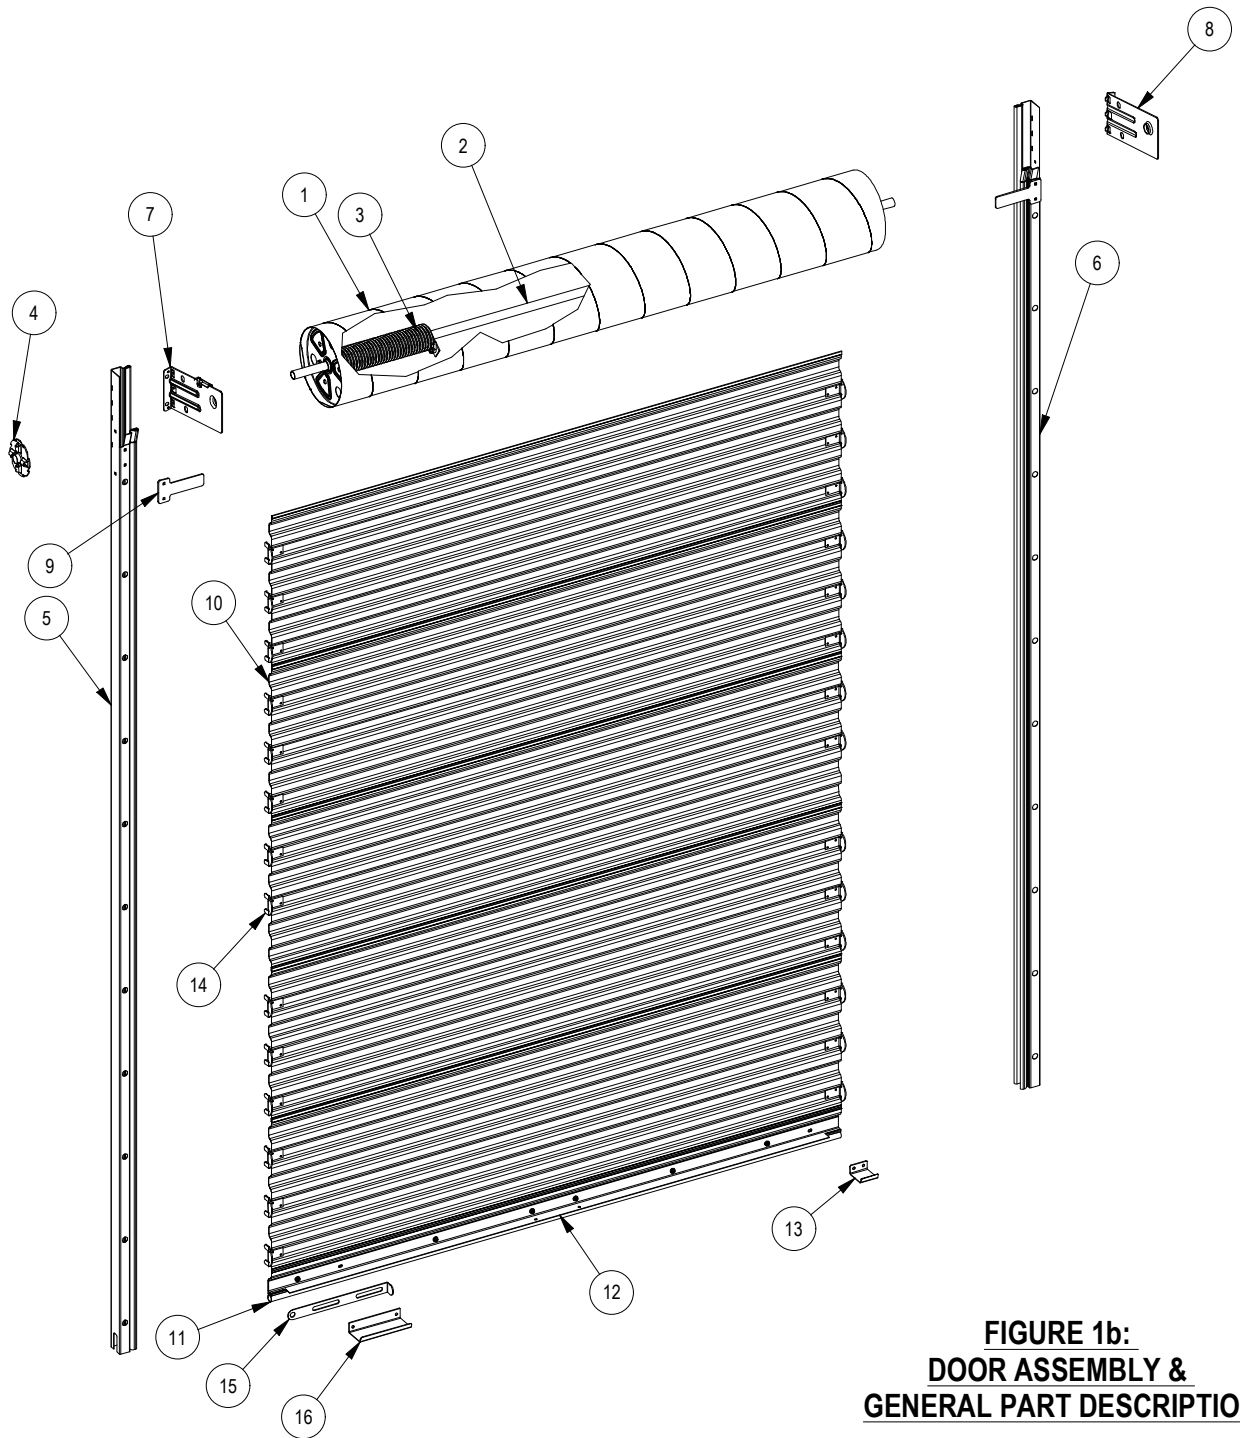

Operation & Maintenance Manual available via pdf download @ www.janusintl.com or upon request

GENERAL BILL OF MATERIALS

ITEM	DESCRIPTION / PART NUMBER	ITEM	DESCRIPTION / PART NUMBER	ITEM	DESCRIPTION / PART NUMBER
1	9 1/2" Spiral Barrel	7	LH, 12Ga, Mini Bracket	13	Mini Clip
2	1" O.D. Axle	8	RH, 12Ga, Mini Bracket	14	Wind Clip
3	Spring/Counterbalance Assembly	9	Bolt On Headstop	15	Comm. Step Plate (Optional)
4	Tensioner Ratchet Wheel	10	26 Ga Corrugated Curtain	16	Comm. Slide Lock (Optional)
5	LH, 16Ga, Guide	11	Astragal	17	
6	RH, 16Ga, Guide	12	Bottom Bar Assembly	18	

HEADROOM/SIDEROOM DIMENSIONAL REFERENCES

FIGURE 3: HEADROOM REQUIREMENT

HEADROOM REQUIREMENT		
OPENING HEIGHT	VERTICAL HEADROOM	HORIZONTAL HEADROOM
THRU 7'-4"	15 ½"	17 ½"
OVER 7'-4" THRU 8'-8"	16"	18"
OVER 8'-8" THRU 10'-0"	17"	18 ¼"


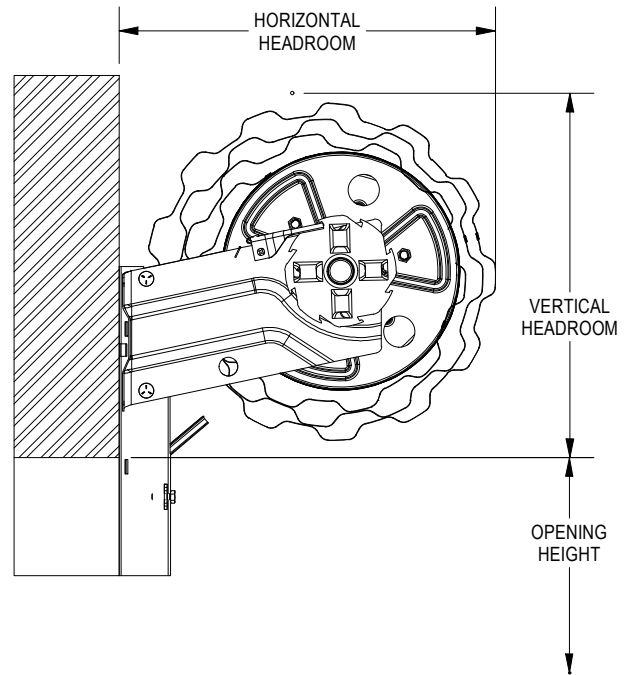



FIGURE 4: SIDEROOM CLEARANCE REQUIREMENT

SIDEROOM CLEARANCE -MANUAL/PANTHEON			
WINDLOCKS	GUIDE	OUTSIDE OF EACH BRACKET LEG	END OF AXLE
NONE	2 1/4"	3 3/16"	3"
YES	2 7/8"	3 7/8"	3 11/16"
ATA EZ ROLLER			
WINDLOCKS	GUIDE	OUTSIDE OF BRACKET - DRIVE SIDE	
NONE	2 1/4"	6 1/2"	
YES	2 7/8"	6 1/2"	
IMPORTANT NOTES			
• DIMENSIONS ARE REFERENCED FROM THE EDGE OF THE OPENING			
• FOR CRITICAL FITS DUE TO REDUCED AVAILABLE HEADROOM OR SIDEROOM CLEARANCES, CONSULT FACTORY			

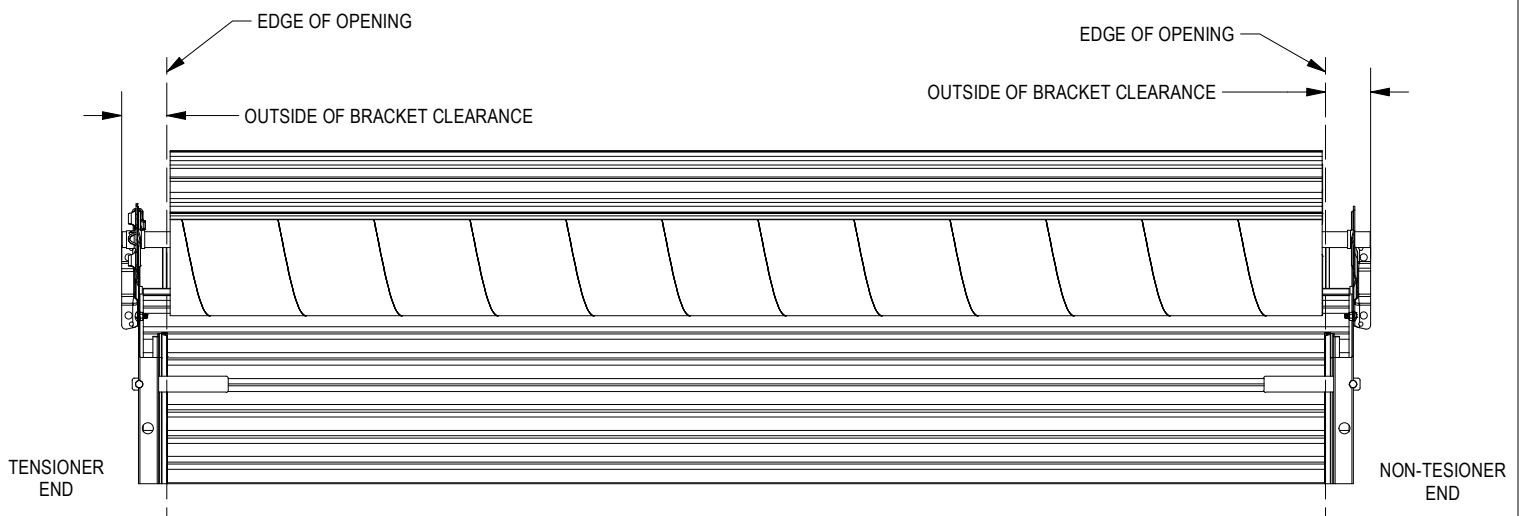

STEP 1: WALL OPENING

- ▶ Check wall opening width and height and verify these measurements against size of door to be installed.
- ▶ Verify that jambs are plumb.
- ▶ Check floor and header for level.
- ▶ Check for adequate side clearance at jambs and clearance above and at sides of header. Check vertical and horizontal headroom requirements. **See Figures 3 & 4** for minimum requirements.
- ▶ Verify that guide mounting surface on jamb is flush.
- ▶ Make sure all parts required for installation are with the door.

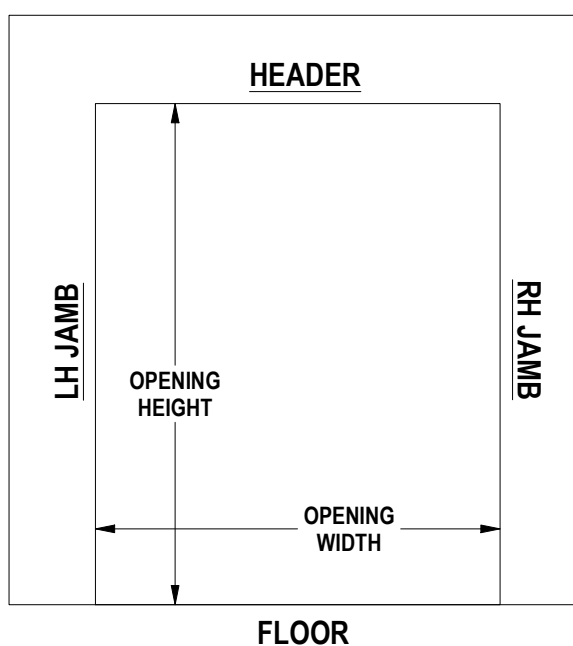


**FIGURE 5:
WALL OPENING**

STEP 2: POSITION DOOR & PARTS

- ▶ Verify floor area is clean in order to prevent damage to curtain.
- ▶ Inside of the building, place left guide on floor perpendicular to opening with guide bottom close to left jamb and the top towards the inside of the building. Repeat step on the right side.
- ▶ Place door on floor at top of and between the guides. Rotate door as necessary to locate bottom bar against floor. **See Figure 6.**
- ▶ Distribute hardware parts to appropriate areas.



**FIGURE 6:
POSITION DOOR AND PARTS**

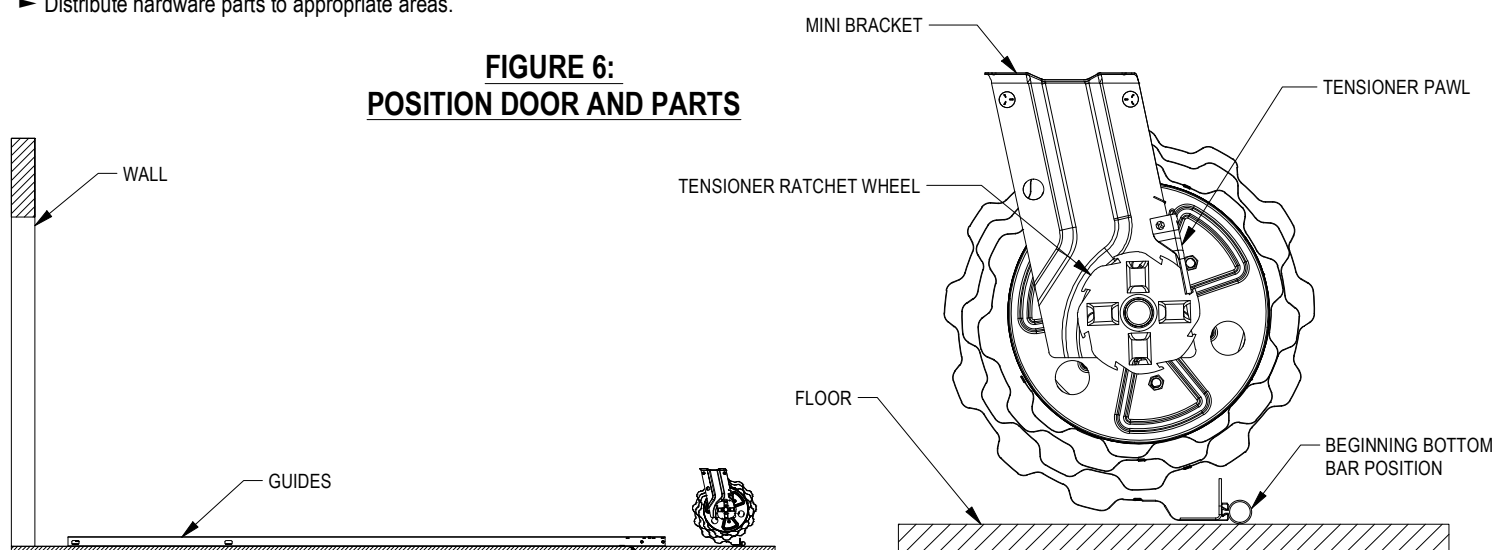

STEP 3: GUIDES TO BRACKET INSTALLATION

- At tensioner end of door, lift flange on Tensioner Pawl until end of the pawl clears the Tensioner Ratchet Wheel. Rotate bracket in order to position short leg end upwards. Release flange on pawl and allow end to engage with the nearest tooth on the Ratchet Wheel.

**FIGURE 7:
MINI BRACKET POSITIONING**

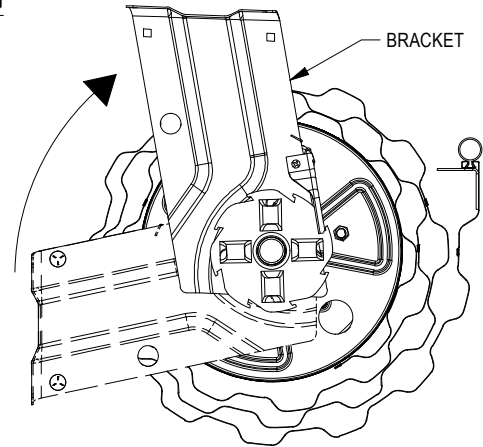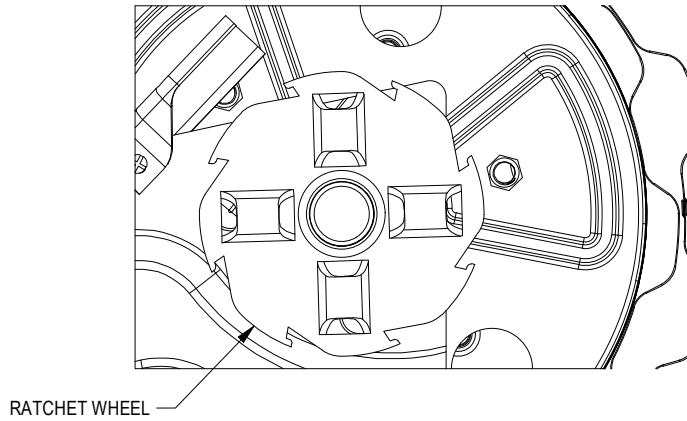

WARNING!
ENSURE TENSIONER PAWL IS FULLY ENGAGED WITH TENSIONER RATCHET WHEEL TOOTH. **SEE FIGURE 7** FOR VISUAL REFERENCE.

BRACKET INSTALLATION


- Bring top end of guide in alignment with Bracket and insert tabs on Bracket into tab slots in guide. **See Figure 8**
- Slide Bracket and guide together until locking tab in guide fully engages notch in Bracket.
- If locking tab does not fully engage with Bracket notch, use hammer and punch to bend tab into Bracket notch.
- Repeat above steps for non tensioner Bracket guide. The Bracket will require being held in position.

NOTE:


- FOR PANTHEON JSS INSTALLATION GUIDE, SEE PAGE 17 & 18.
- FOR ATA OPERATOR INSTALLATION GUIDE, SEE PAGE 19 & 20.

BOLT - ON BRACKET INSTALLATION

- Attach door Bracket to guides. Use two (2) each $\frac{1}{4}$ " - 20 x $\frac{1}{2}$ " Carriage Bolts and $\frac{1}{4}$ " - 20 Serrated Hex Nuts per Bracket. **See Figure 9.**

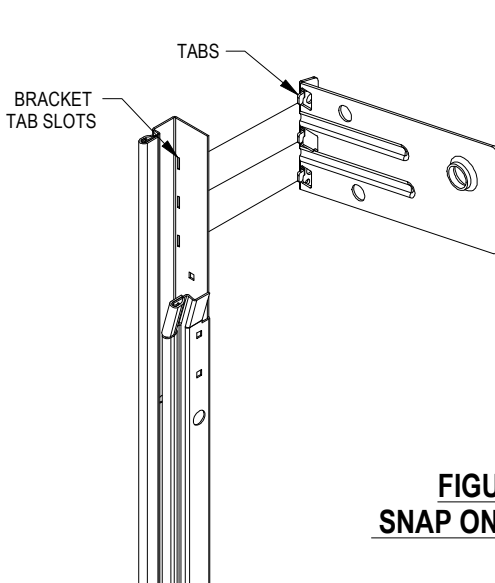

**FIGURE 8:
SNAP ON BRACKET**

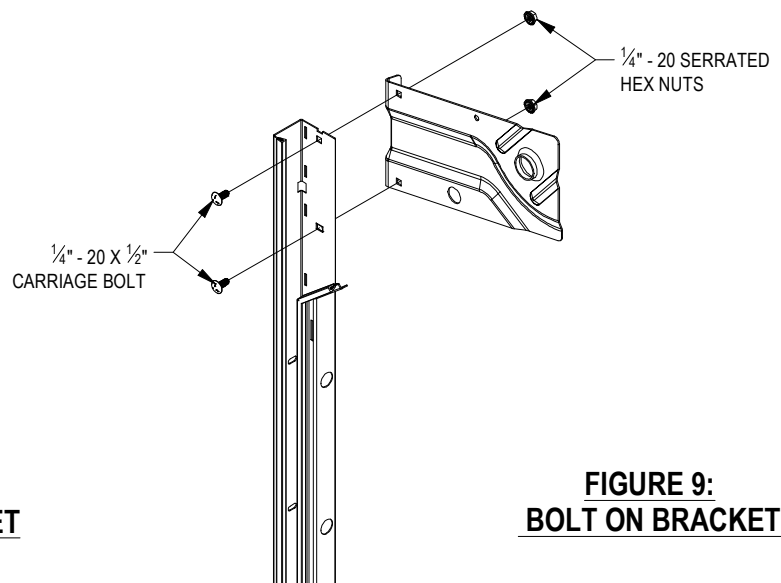

**FIGURE 9:
BOLT ON BRACKET**

WARNING!
LOCKING TAB IN GUIDE MUST FULLY ENGAGE WITH NOTCH IN BRACKET. FAILURE TO DO SO MAY ALLOW THE DOOR TO FALL DURING INSTALLATION, WHICH CAN CAUSE SERIOUS INJURY OR DEATH AND/OR DAMAGE TO DOOR.

STEP 4: LIFTING DOOR ASSEMBLY

- Move door and guide assemblies toward wall opening with bottom of guide resting next to jambs.
- Lift door assembly evenly by pivoting around bottom of guides See Figure 10.

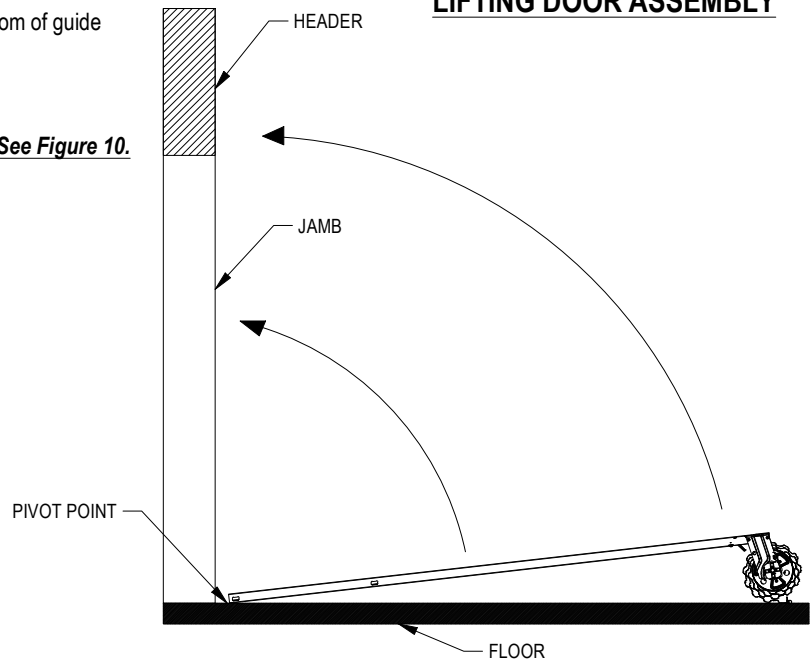


FIGURE 10:
LIFTING DOOR ASSEMBLY

NOTE:

- DOORS OVER 8'-0" HIGH WILL REQUIRE A MECHANICAL LIFTING DEVICE TO LIFT DOOR & GUIDES INTO MOUNTING POSITION.
- ANY MECHANICAL LIFTING DEVICE SUCH AS FORKLIFTS OR GENIE LIFTS, MUST BE PADDED TO PREVENT CURTAIN DAMAGE.

WARNING!

TWO INSTALLERS ARE REQUIRED TO LIFT DOOR ASSEMBLY INTO POSITION AGAINST JAMBS. THE GUIDES ARE NOT DESIGNED TO SUPPORT THE DOOR WEIGHT DURING A ONE MAN INSTALLATION. ATTEMPTING INSTALLATION WITH ONLY ONE INSTALLER CAN RESULT IN SERIOUS INJURY AND/OR DAMAGE TO DOOR. DO NOT LEAVE DOOR UNATTENDED UNTIL IT IS SECURELY ATTACHED TO JAMBS.

NOTE:

FOR OPENING HEIGHTS OVER 8'-8", CLAMP BOTTOM OF BRACKETS TO GUIDES WITH LOCKING PLIERS IN ORDER TO ENSURE RIGIDITY OF TOP OF GUIDE WHILE LIFTING. REMOVE PLIERS AFTER SECURING BRACKETS TO JAMBS.

STEP 5: GUIDES & BRACKETS TO JAMB

- Attach brackets and guides to jambs using fasteners shown in Table 1 on Page 10 & 11.
- The guides should be mounted centered about the opening and spaced curtain width + $\frac{9}{16}$ " apart for non-Windlock doors and curtain width + $2\frac{1}{2}$ " for Windlock doors. This spacing is measured from back of guide to back of guide. Both guides must be plumb. See Page 10 & 11.
- The appropriate fastener must be installed at each hole location in brackets and guides. See Figure 11.

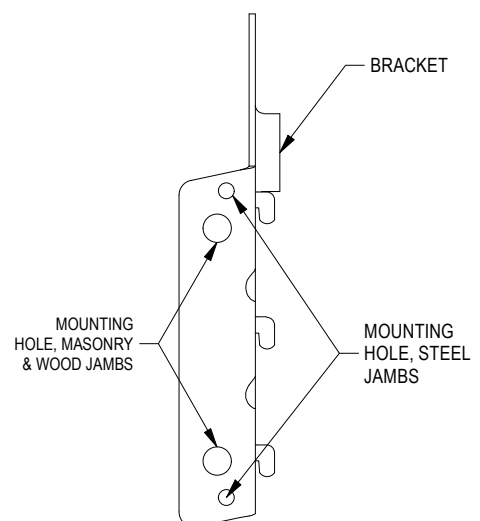


FIGURE 11:
FASTENER PLACEMENT

WARNING!

DOOR CAN FALL IF BOTH BRACKETS ARE NOT SECURELY FASTENED TO THE JAMBS. ALL FASTENERS ATTACHING BRACKETS TO JAMBS MUST FIT SECURELY INTO A STRUCTURAL MEMBER OR SURFACE. IF DOOR FALLS, SERIOUS INJURY OR DEATH AND/OR DAMAGE TO DOOR CAN RESULT.

STEP 5: GUIDES & BRACKETS TO JAMB (CONTINUED)


Table 1: WALL FASTENERS - (for jamb attachment of Brackets and Guides)

ITEM	JAMB	FASTENERS
BRACKETS	STEEL	1/4" - 14 x 1" TEKS SCREW
BRACKETS	CONCRETE/FILLED CMU	1/4" x 1 3/4" DEWALT SCREW BOLT+
BRACKETS	WOOD	1/4" x 2" LAG SCREW
GUIDES W/O WINDLOCKS	STEEL	1/4" - 14 x 1" TEKS SCREW
GUIDES W/O WINDLOCKS	CONCRETE/FILLED CMU	1/4" x 1 3/4" DEWALT SCREW BOLT+
GUIDES W/O WINDLOCKS	WOOD	1/4" - 14 x 2" HEX LAG SCREW


WARNING!

DOOR CAN FALL IF BOTH BRACKETS ARE NOT SECURELY FASTENED TO THE JAMBS. ALL FASTENERS ATTACHING BRACKETS TO JAMBS MUST FIT SECURELY INTO A STRUCTURAL MEMBER OR SURFACE. IF DOORS FALLS, SERIOUS INJURY OR DEATH AND/OR DAMAGE TO DOOR CAN RESULT.


**FIGURE 12:
CONCRETE/FILLED CMU W/O WINDLOCKS**

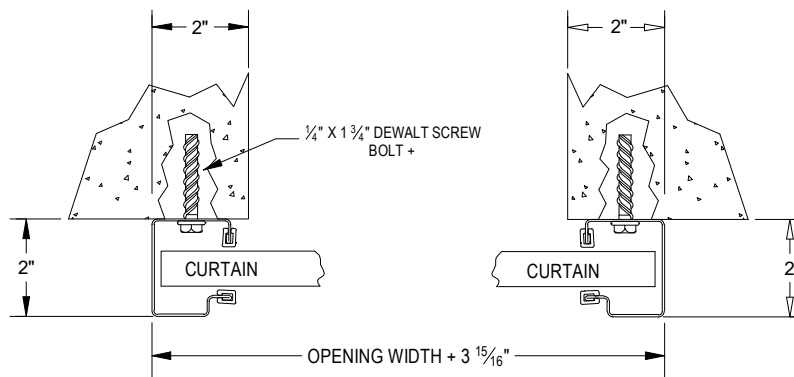

**FIGURE 13:
WOOD JAMBS W/O WINDLOCKS**

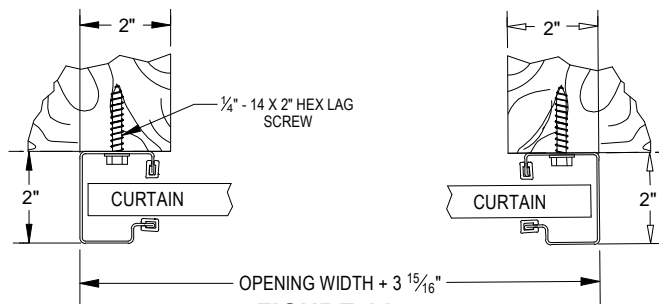

**FIGURE 14:
STEEL JAMBS W/O WINDLOCKS**

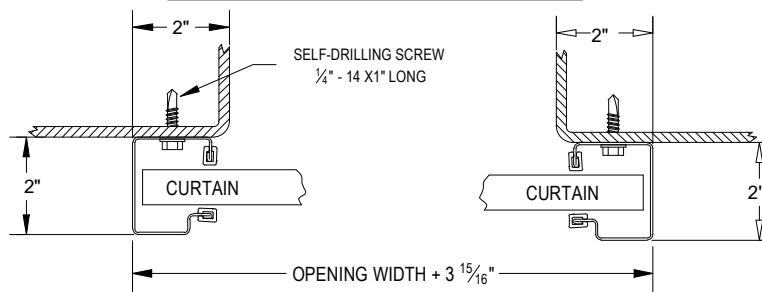


NOTE:

WELDING OF GUIDES TO THE JAMBS IS NOT RECOMMENDED.


STEP 5: GUIDES & BRACKETS TO JAMB (CONTINUED)

Table 1: WALL FASTENERS -(for jamb attachment of Brackets and Guides)


ITEM	JAMB	FASTENERS
BRACKETS	STEEL	$\frac{1}{4}$ " - 14 x 1" TEKS SCREW
BRACKETS	CONCRETE/ FILLED CMU	$\frac{1}{4}$ " x 1 $\frac{3}{4}$ " DEWALT WEDGE-BOLT
BRACKETS	WOOD	$\frac{1}{4}$ " X 2" LAG SCREWS
GUIDES W/ WINDLOCKS	WOOD	$\frac{1}{4}$ " X 2" CONSTRUCTION LAG SCREW
GUIDES W/ WINDLOCKS	STEEL	#12-14 X 1" SELF-DRILLING PANCAKE HEAD TEKS SCREW
GUIDES W/ WINDLOCKS	CONCRETE/FILLED CMU	$\frac{5}{16}$ " X 2 $\frac{1}{4}$ " TAPCON XL (TORX T-40 DRIVE) OR DEWALT ULTRACON

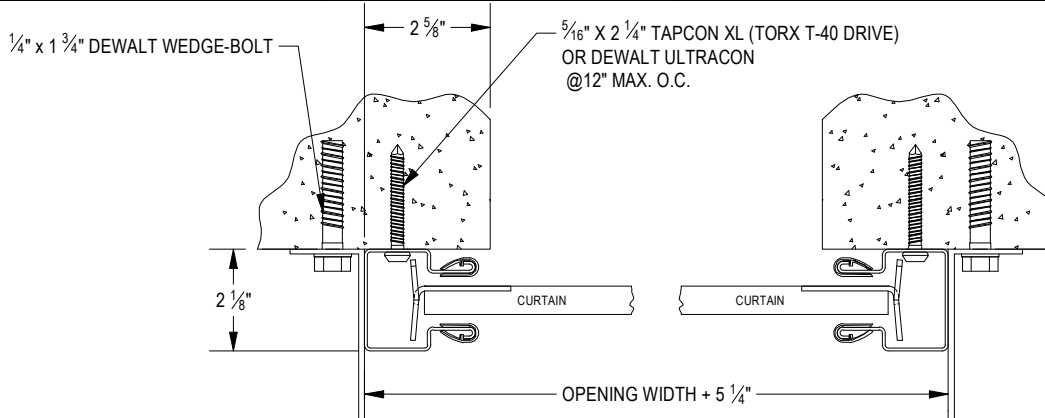

**FIGURE 15:
CONCRETE/FILLED CMU WITH WINDLOCKS**

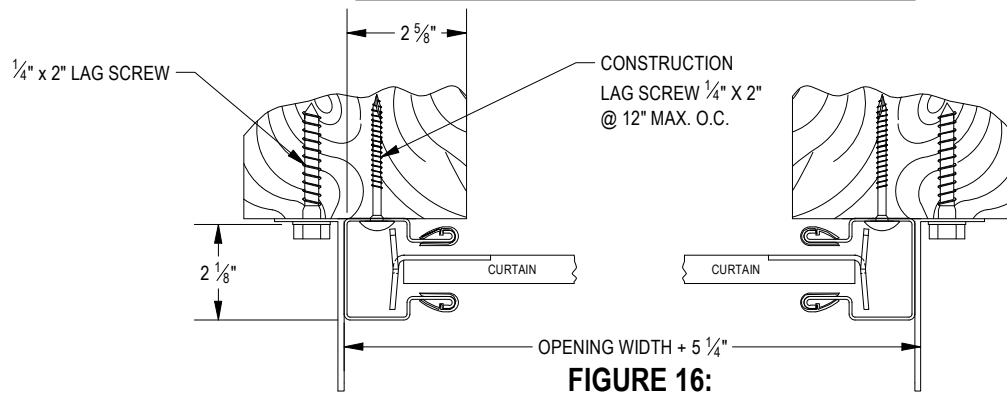

**FIGURE 16:
WOOD JAMBS WITH WINDLOCKS**

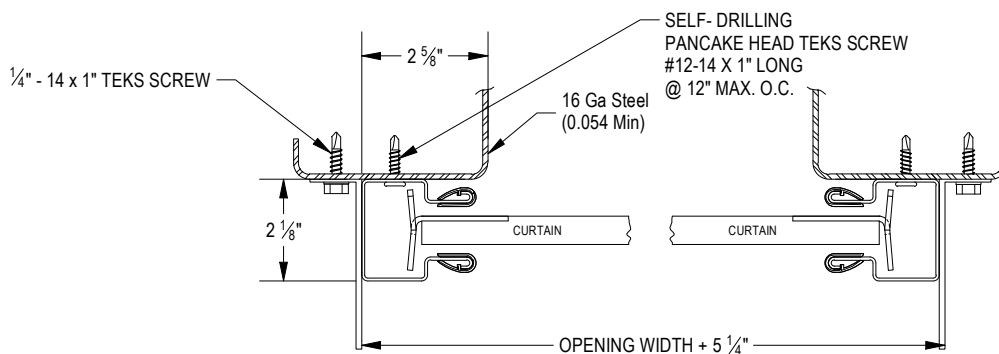


**FIGURE 17:
STEEL JAMBS WITH WINDLOCKS**

NOTE:
WELDING OF GUIDES TO THE JAMBS IS NOT RECOMMENDED.

STEP 6: PRE INSTALL CARRIAGE BOLTS

- For doors **with Windlocks**, attach two (2) $\frac{1}{4}$ " - 20 x $\frac{5}{8}$ " Carriage Bolts and $\frac{1}{4}$ " - 20 Whiz Nuts per guide and hand tighten $\frac{1}{4}$ " Whiz Nuts when in place. See Figure 18.


FIGURE 18:
PRE INSTALL CARRIAGE BOLTS

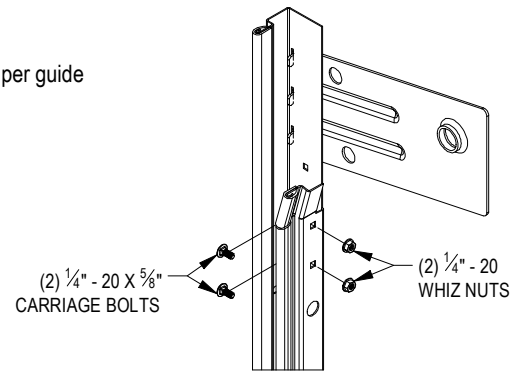


STEP 7: SETTING INITIAL SPRING TENSION

- Before applying initial spring tension, ensure tensioner pawl is fully engaged with Tensioner Ratchet Wheel tooth. See Figure 19 below for visual reference.
- Rotate door two (2) revolutions in the direction that would send the bottom bar down through the guides.
- While firmly holding the door at the bottom bar, cut the tape and plastic wrap that holds the door in a coil. Direct the bottom bar down into the guides, stopping just past the head stop area and hold securely through completion of Step 8.

FIGURE 19:
SETTING INITIAL SPRING TENSION

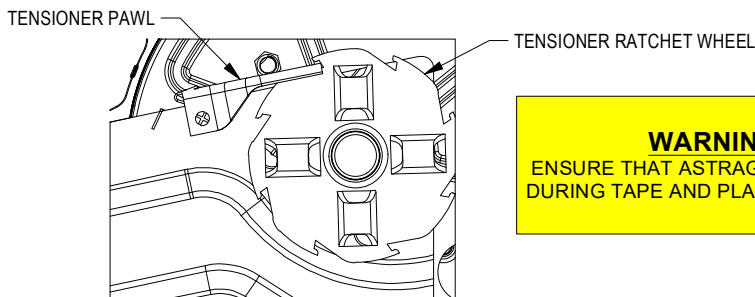

WARNING!
ENSURE THAT ASTRAGAL IS NOT CUT DURING TAPE AND PLASTIC REMOVAL.

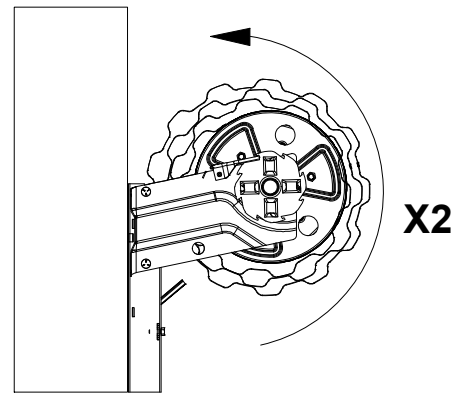

WARNING!
EXTREME SPRING TENSION CAN CAUSE SERIOUS INJURY OR DEATH. INSTALLATION, REPAIRS, AND ADJUSTMENTS MUST BE MADE BY A TRAINED ROLLING SERVICE DOOR SYSTEM TECHNICIAN USING PROPER TOOLS AND INSTRUCTIONS. DOOR MUST BE FULLY OPENED WHEN MAKING ADJUSTMENTS.


WARNING!
ENSURE TENSIONER PAWL IS FULLY ENGAGED WITH TENSIONER RACHET WHEEL TOOTH.

STEP 8: HEADSTOPS


- For doors **without Windlocks**, slide Headstop from inside of each guide. Secure each Headstop to guide with $\frac{1}{4}$ " - 20 x $\frac{1}{2}$ " Self Tapper. See Figure 20.
- For doors **with Windlocks**, loosen $\frac{1}{4}$ " - 20 Whiz Nuts used in Step 6 and attach Bolt On Headstop. Secure each Headstop to guide with those loosened Whiz Nuts. See Figure 20.

FIGURE 20:
WINDLOCK & NON WINDLOCK HEADSTOPS

WITHOUT WINDLOCKS

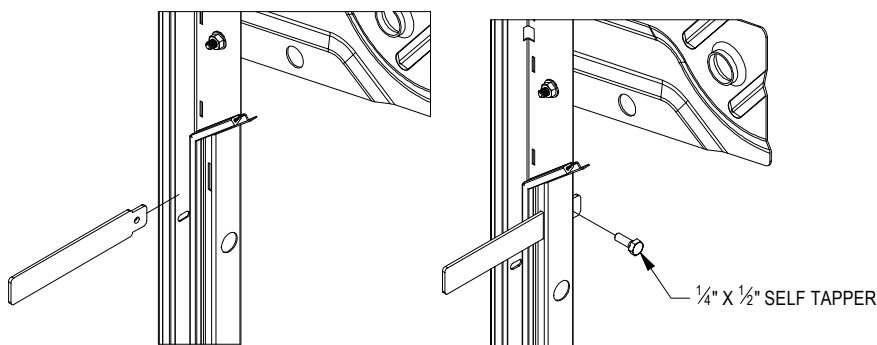

WITH WINDLOCKS

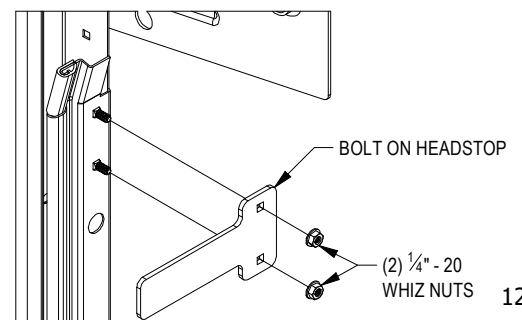

STEP 9: MINI STOP CLIPS, HANDLE(S), AND PULL ROPE

- Install Mini Clip at each end on inside of Bottom Bar using single $\frac{1}{4}$ " - 20 x $\frac{5}{8}$ " Carriage Bolt and Nut.
- Install Handle(s) on outside of Bottom Bar using $\frac{1}{4}$ " - 20 x $\frac{5}{8}$ " Carriage Bolts and Nuts. See Figure 22.
- Install rope in one of the holes at the center of the horizontal leg of the Bottom Bar angle.

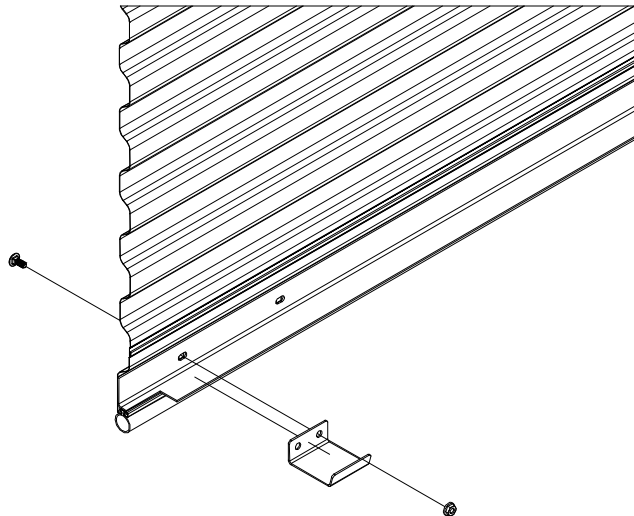


FIGURE 21:
MINI CLIP

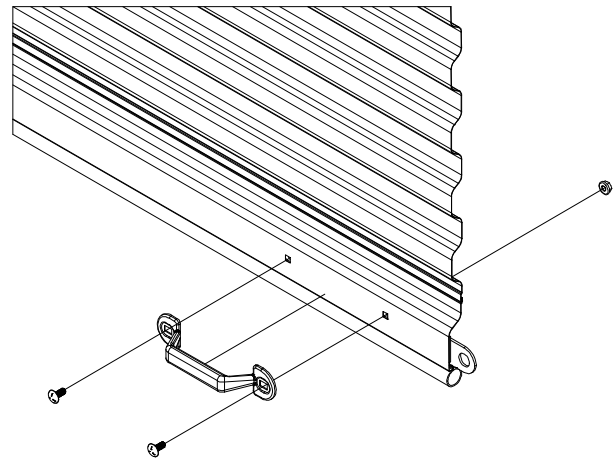


FIGURE 22:
HANDLE

NOTE:

FOR DOORS GREATER THAN 6' WIDE TWO (2) HANDLES WILL BE PROVIDED FOR INSTALLATION AT CENTER & LATCH END OF BOTTOM BAR.

WARNING!

INSTALLATION OF MINI CLIPS ARE REQUIRED. FAILURE TO PROPERLY INSTALL CLIPS WILL RESULT IN THE DOOR CURTAIN TO TRAVEL BEYOND THE GUIDES RESULTING IN DOOR DAMAGE AND/OR PERSONAL INJURY.

STEP 10: CHECK DOOR OPERATION

- Lower and raise the door to test the doors balance.
- If door is easy to close but difficult to open; increase spring tension. See Figure 23, on Page 14.
- If door is difficult to close but easy to open; decrease spring tension. See Figure 23, on Page 14.

NOTE:

MANUAL ADJUSTMENTS OF SPRING TENSION MAY BE REQUIRED. ADJUSTMENTS ARE TO BE MADE USING $\frac{3}{8}$ " DIAMETER WINDING BAR. WHEN MAKING ADJUSTMENTS, ENSURE TENSIONER PAWL IS FULLY ENGAGED WITH TENSIONER RATCHET WHEEL TOOTH BEFORE REMOVING WINDING BAR FROM IT. SEE FIGURE 22 FOR VISUAL REFERENCE

STEP 11: ADJUST SPRING TENSION

- Place $\frac{3}{8}$ " diameter winding bar in Tensioner Ratchet Wheel.
- Rotate winding bar in the down direction to increase spring tension. Each engagement of a tooth equals $\frac{1}{8}$ turn.
- To decrease spring tension, pull down slightly on winding bar until pawl disengages tooth. Lift flange on pawl and move winding bar up until just past the pawl/tooth engagement. Allow pawl to rest on Ratchet Wheel and continue moving winding bar up until pawl is fully engaged with the tooth.
- Remove winding bar and operate door.
- Repeat steps above (If needed).

WARNING!

COMPONENTS UNDER EXTREME SPRING TENSION COULD RESULT IN DEATH OR SERIOUS INJURY. ADJUSTMENTS MUST BE MADE BY TRAINED ROLLING DOOR TECHNICIANS USING PROPER TOOLS. DOOR MUST BE FULLY OPENED WHEN MAKING ADJUSTMENTS

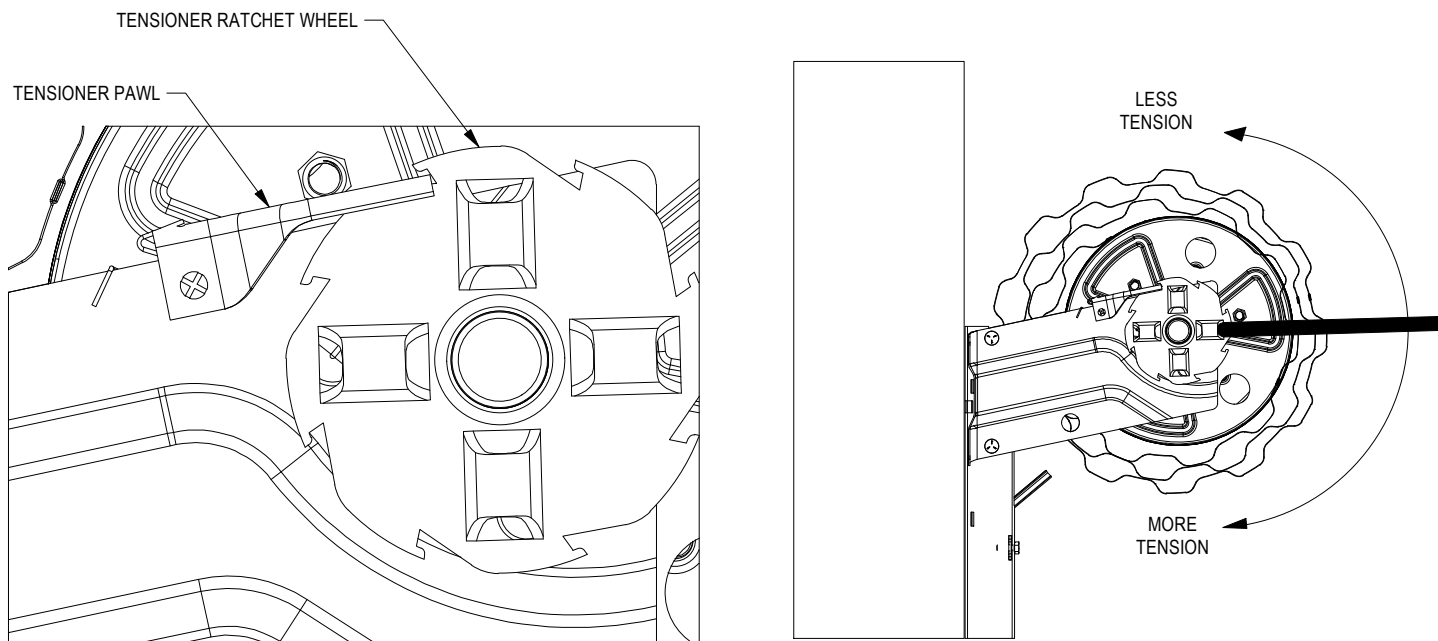


FIGURE 23:
TENSIONER PAWL ENGAGEMENT

NOTE:

LATCH SLIDE SLOT IN THE GUIDE MAY REQUIRE ADJUSTING AFTER DOOR INSTALLATION DUE TO VARIANCES IN MANUFACTURING AND/OR SITE CONDITIONS

STEP 12: PRODUCT SAFETY LABELS

- Visual ✓ for RDD-201 on tension bracket. (Page 15)
- Visual ✓ for RDD-204 on bottom bar. (Page 15)
- Install RDD-202 door drive side, guide or jamb. (Page 15)

NOTE:

JANUS REQUIRES THESE PRODUCT SAFETY LABELS TO BE IN PLACE AND/OR INSTALLED TO FULLY COMPLETE INSTALLATION.

PRODUCT SAFETY LABELS

⚠ WARNING

Moving door could result in death or serious injury Do NOT close door until doorway is clear
SAFETY INSTRUCTIONS
1. Control the speed of the door during manual operation. 2. Do not stand or walk under moving door. 3. Keep doorway clear and in full view while operating door. 4. Do NOT permit children to play on, near, or with door, or operate door controls. 5. Unlock door before opening door. 6. Sensing devices on motor operating doors should be tested frequently. 7. Adjustments or repairs must ONLY be made by a trained door systems technician using proper tools and instructions. 8. Visually inspect door and hardware monthly for worn and/or broken parts and check if door operates freely. DO NOT operate a door with a broken spring.
Place label at a readable height on door drive side guide or jamb. Do NOT remove, cover, or paint over label. This label should be inspected periodically for legibility, and a replacement label should be ordered from the door manufacturer as needed.

12/07 RDD-202 ©

RDD-202 Rolling Door Safety Label

RDD-201 Tension Safety Label

⚠ WARNING

Components under extreme spring tension could result in death or serious injury.
SAFETY INSTRUCTIONS
1. Repairs and adjustments must be made by a trained rolling door systems technician using the proper tools and instructions. 2. Door must be fully opened when making adjustments.
Do NOT remove cover or paint over label. This label should be inspected periodically for legibility, and a replacement label should be ordered from the door manufacturer as needed.

12/07 RDD-201 ©
Order # _____

⚠ WARNING	SAFETY INSTRUCTIONS	4. Do NOT permit children to play on, near, or with door, or operate door controls. 5. Unlock door before opening door. 6. Sensing devices on motor operated doors should be tested frequently.	7. Adjustments or repairs must ONLY be made by a trained door systems technician using proper tools and instructions. 8. Visually inspect door and hardware monthly for worn and/or broken parts and check if door operates freely. DO NOT operate a door with a broken spring.	Attach label to bottom bar. Do NOT remove, cover, or paint over label. This label should be inspected periodically for legibility, and a replacement label should be ordered from the door manufacturer as needed.	
 Moving door could result in death or serious injury. Do NOT close door until doorway is clear.	1. Control the speed of the door while manually operating. 2. Do not stand or walk under moving door. 3. Keep doorway clear and in full view while operating door.				12/07 RDD-204 ©

RDD-204 Rolling Door Bottom Bar Label

- Janus International requires the following product safety/labels to be in place and/or installed to fully complete installation.
- Any case where product safety labels are missing or damaged, contact Janus International immediately to obtain replacements.

OPTIONAL SLIDE LOCK & TOP/SIDE DRAFT STOP

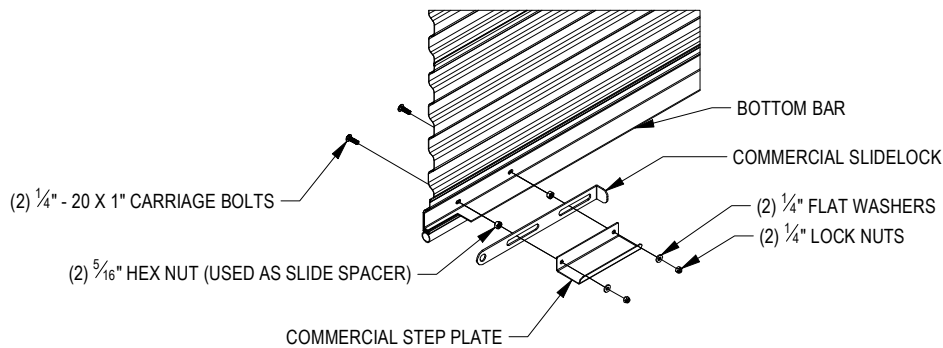


FIGURE 24:
OPTIONAL BOTTOM BAR
MOUNTED SLIDE LOCKS

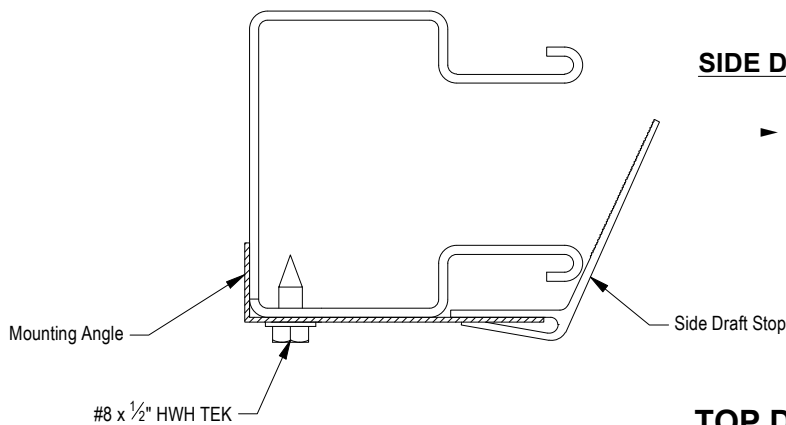



FIGURE 25:
SIDE DRAFT INSTALLATION

SIDE DRAFT STOP INSTALLATION

- Attach Draft Stop & angle flush with guide using #8 x $\frac{1}{2}$ " HWH Tek.

TOP DRAFT STOP INSTALLATION

- With door fully closed, mark curtain for Draft Stop mounting location.
- Raise curtain until mounting location is accessible.
- Attach top Draft Stop to curtain every 12" using #14 x $\frac{3}{4}$ " HWH TEK screws and Flat Washers.

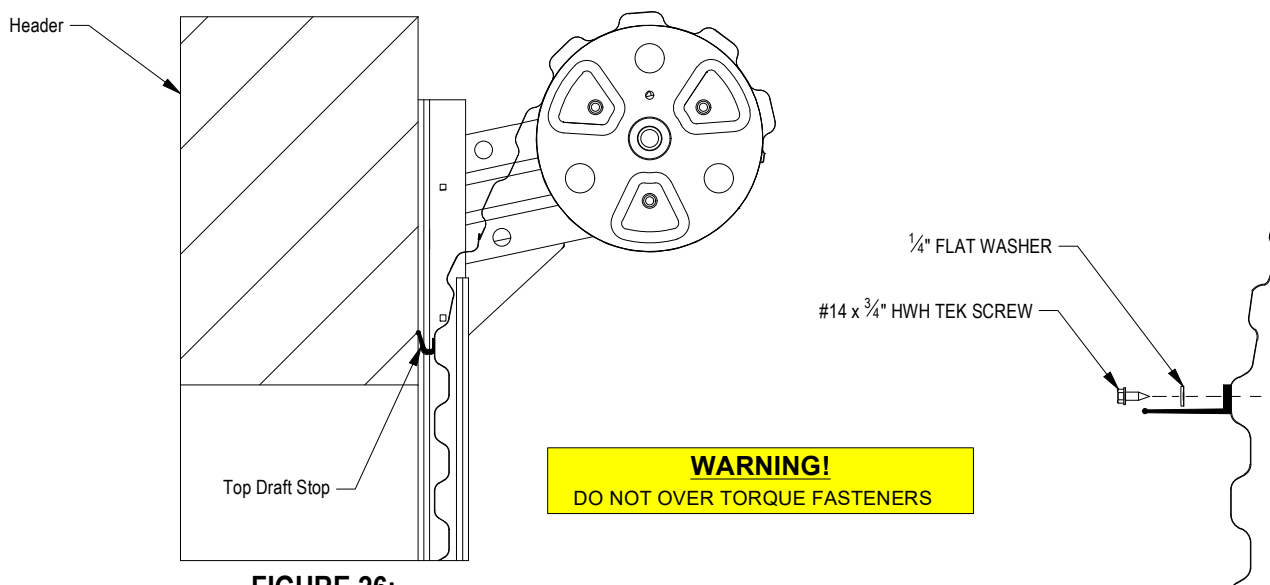

WARNING!
DO NOT OVER TORQUE FASTENERS

FIGURE 26:
TOP DRAFT INSTALLATION


OPTIONAL JSS PANTHEON INSTALLATION

NOTE:

CONNECTING THE MANUAL RELEASE CABLE TO DRIVE HEAD IS TO BE DONE BEFORE DOOR IS INSTALLED


STEP 1

CHECK FOR 5" INSET AND REMOVE BOLT FROM DRIVE HEAD

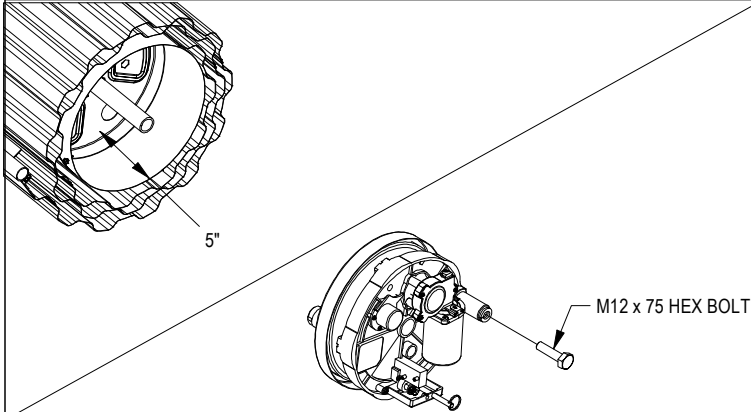


STEP 2

PULL RING ON SPRING LOADED PIN & ROTATE MOTOR HEAD

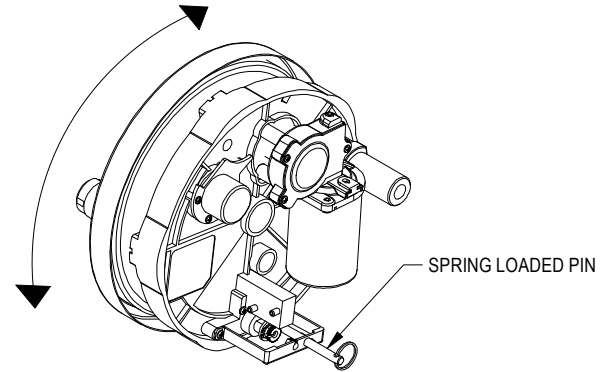


STEP 3

REMOVE THE KNURLED SPLIT NUT

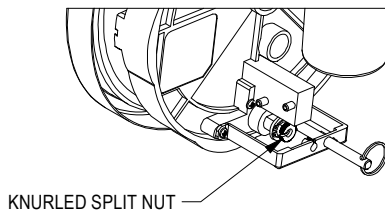


STEP 4

INSERT MANUAL RELEASE CABLE INTO THREADED RECESS

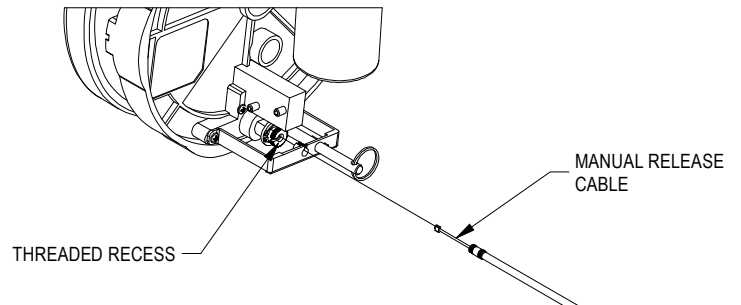


STEP 5

REINSTALL KNURLED SPLIT NUT & TIGHTEN

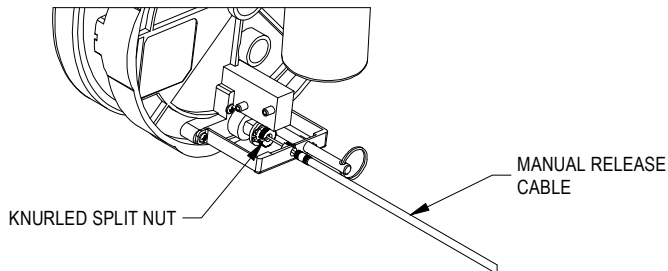


STEP 6

COIL RELEASE CABLE AND MOTOR ELETRIC CABLES

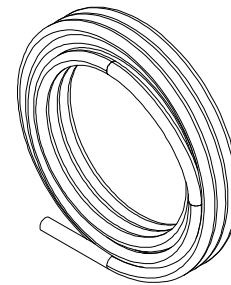


STEP 7

REMOVE RIGHT HAND PANTHEON BRACKET

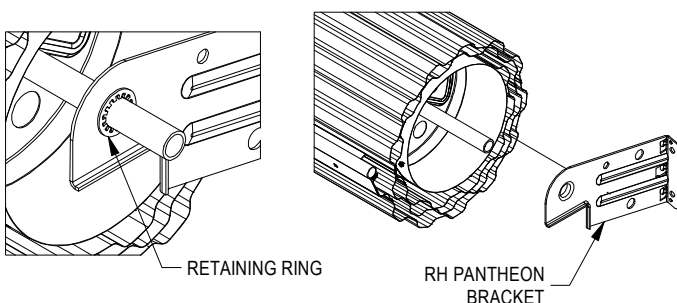

STEP 8

INSTALL DRIVE UNIT

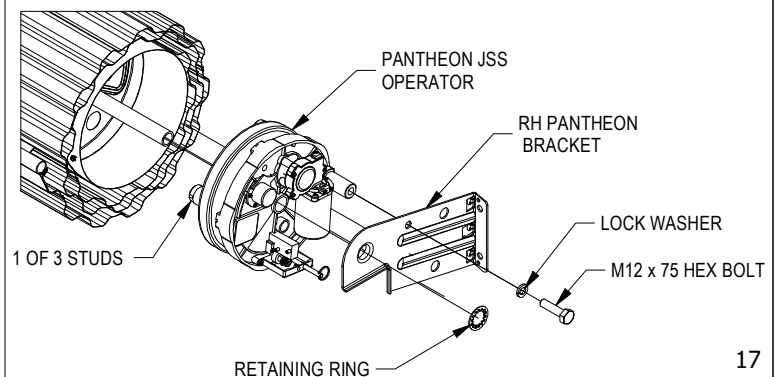

OPTIONAL JSS PANTHEON INSTALLATION

NOTE:

CONNECTING THE MANUAL RELEASE CABLE TO DRIVE HEAD IS TO BE DONE BEFORE DOOR IS INSTALLED

WARNING!

TAKE CARE TO ENSURE THAT THE CABLES FROM THE DRIVE UNIT ARE NOT DAMAGED OR PERMITTED TO RUB ON ANY PART OF THE STRUCTURE OR THE DOOR DURING THE INSTALLATION.

NOTE:

FOR THE COMPLETE INSTRUCTIONS ON INSTALLING AND SETTING UP THE PANTHEON OPERATOR, PLEASE REFERENCE THE PANTHEON INSTRUCTIONS FOR FURTHER DETAILS.

- Step 1: Check to ensure 5" inset on the barrel is present. Remove bolt from drive head.
 - Step 2: Pull ring on spring loaded pin and twist to disengage auto (electric mode). Rotate motor head in both directions to test manual operation.
 - Step 3: Remove the knurled split nut.
 - Step 4: Uncoil the manual release cable and insert the free end of the cable into the threaded recess where the knurled split nut was removed.
 - Step 5: Reinstall knurled split nut and tighten.
 - Step 6: Carefully coil release cable and motor electric cables together and secure to each other in order to prevent uncoiling or damage during installation of the door.
 - Step 7: Remove right hand Pantheon bracket from end of door.
 - Step 8: Place the drive unit inside the door drum assembly and verify the three (3) studs on the back of the drive unit are fully engaged in the three (3) holes on the steel drum wheel.
-
- Return to **Page 9** to continue installation.



JANUS
INTERNATIONAL GROUP

JANUS INTERNATIONAL GROUP LLC

135 JANUS INTERNATIONAL BLVD.
TEMPLE, GA 30179


PHONE (770) 562-2850 / FAX (770) 562-1991

www.janusintl.com







OPTIONAL ATA RETROFIT INSTRUCTIONS

Release Date: 06/12/2026

810002-0001

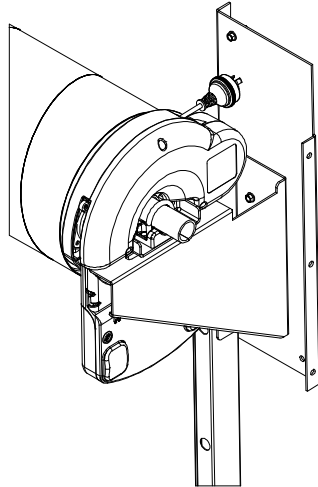

**SEE PAGE 20 FOR
GENERAL PART DESCRIPTIONS AND INSTALLATION NOTES**

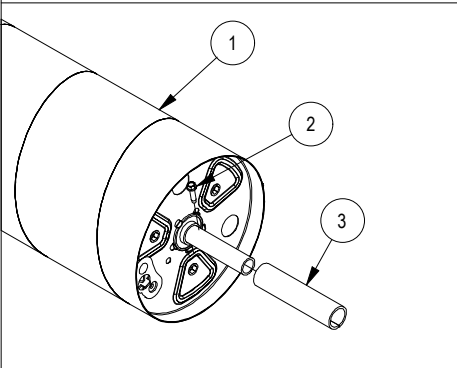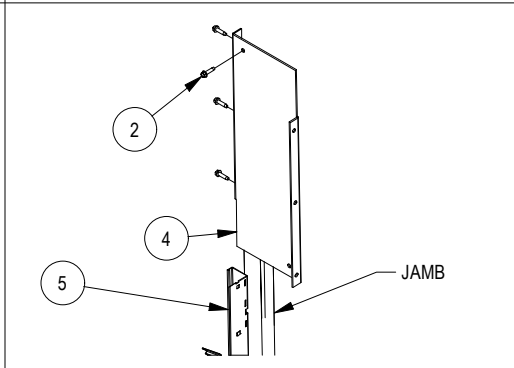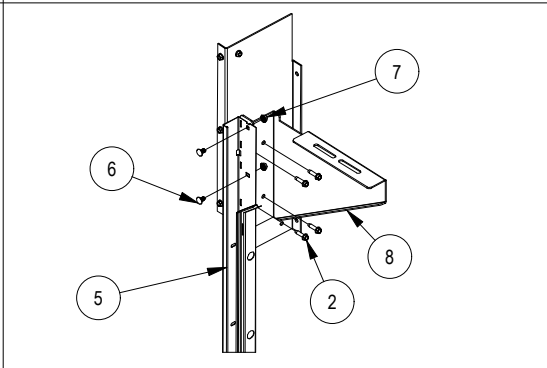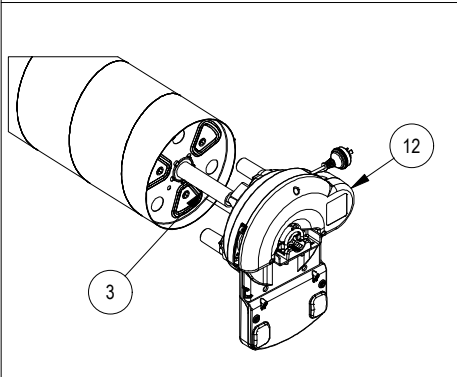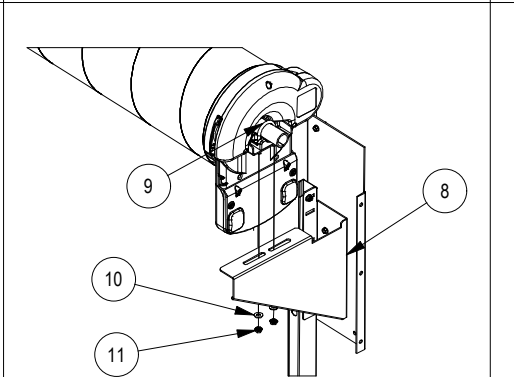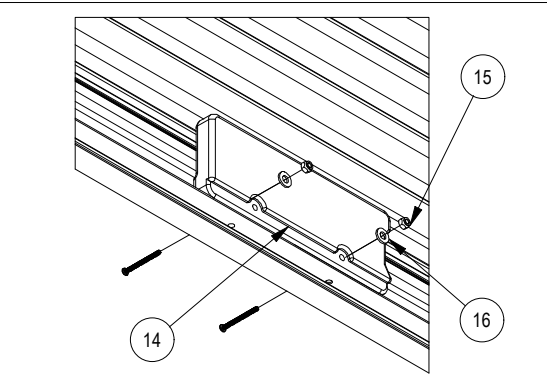STEP 1	STEP 2	STEP 3
INSTALL AXLE SLEEVE	INSTALL MOTOR PLATE (OPTIONAL)	INSTALL BRACKET
		
STEP 4	STEP 5	STEP 6
MOTOR TO DOOR	DOOR TO BRACKET	ATTACH ATA WEIGHT
		

IMPORTANT INFORMATION

JANUS INTERNATIONAL DOORS MUST BE INSTALLED BY TRAINED ROLLING DOOR TECHNICIANS QUALIFIED TO INSTALL PRODUCT SAFELY WITH PROPER KNOWLEDGE, TOOLS, SAFETY AND INSTALLATION EQUIPMENT. CAREFULLY READ INSTALLATION INSTRUCTIONS. FAMILIARIZE YOURSELF WITH ALL INSTALLATION PROCEDURES, WARNINGS, CAUTIONS, AND NOTES BEFORE ATTEMPTING TO INSTALL DOOR. JANUS INTERNATIONAL CORPORATION WILL NOT WARRANTY OR ACCEPT RESPONSIBILITY FOR DOORS NOT INSTALLED PER THESE INSTALLATION INSTRUCTIONS.

GENERAL PART DESCRIPTIONS

ID	ITEM NUMBER	ITEM DESCRIPTION
1	N/A	BARREL ASSEMBLY
2	600022-0027	SCREW, SD, TEK, HWH, #14 x 1, 1/4" THD/INCH
3	200345-0000	SLEEVE, AXLE, 5 1/2"
4	200389-0000	PLATE, Z-MOTOR, RETROFIT, ATA
5	N/A	GUIDE
6	600014-0002	BOLT, CARRIAGE, RH, SQR. NECK, 1/4" - 20 X 5/8", SS
7	600008-0001	NUT, SERRATED FLANGE (WHIZNUT), HEX, 1/4" - 20 UNC
8	200390-0000	BRACKET, RETRO, ATA
9	N/A	ATA UBOLT
10	N/A	ATA FLAT WASHER
11	N/A	ATA WHIZ NUT
12	N/A	ATA EASY ROLLER OPERATOR
13	N/A	PAN HEAD SCREW 8-36 x 2"
14	N/A	ATA WEIGHT BAR
15	N/A	NILOCK NUT
16	N/A	3/16" x 1/2" FLAT WASHERS

INSTALLATION NOTES

STEP	NOTES
1	TEK SCREW (2) TO GO THRU RETRO AXLE SLEEVE (3) AND INTO AXLE OF DOOR ASSEMBLY 1" FROM DRUMHEAD
2	PLACE Z MOTOR PLATE (4) BEHIND GUIDE (5), BETWEEN IT AND THE JAMB. THEN USE FASTENERS (2) TO FIX IT IN THE PROPPER LOCATION.
3	ATTACH RETRO FIT BRACKET (8), TO GUIDE (5) WITH CARRIAGE BOLTS (6) AND SERRATED FLANGE NUTS (7). THEN SECURE IT TO THE Z MOTOR PLATE (4) WITH TEK SCREWS (2)
4	SLIDE THE ATA EASY ROLLER OPERATOR (12) ONTO THE AXLE SLEEVE (3) AND ENSURE THAT THE U BOLT (9) PROVIDED WITH THE OPERATOR IS PLACED OVER AXLE SLEEVE (3)
5	SECURE THE ATA EASY ROLLER OPERATOR AND DOOR ASSEMBLY WITH FLAT WASHERS (10) AND SERRATED FLANGE WHIZNUTS (11) THAT WERE SUPPLIED WITH THE OPERATOR TO RETRO FIT BRACKET (8)
6	SECURE THE ATA WEIGHT BAR (14) TO THE CENTER OF THE BOTTOM BAR WITH TWO 3/16" X 1/2" FLAT WASHER (16), NILOCK NUTS (15), AND 8-36 X 2" PAN HEAD SCREWS(13)

Operation and Maintenance Manual

The following manual is provided to evaluate the operational performance and future maintenance of Roll Up Doors Direct Rolling Sheet door product line. Roll Up Doors Direct mandates rolling sheet door product installation by trained rolling door technicians and future maintenance by experienced/qualified personnel. Specific parts, components, assemblies, etc. that are determined to be defective, worn, or unsafe by performance evaluations or preventative maintenance programs must result in rolling sheet door assembly taken out of service. All repairs, part replacements or adjustments must be made by trained rolling door technicians to place rolling sheet door assembly back into service. It is **MANDATORY that all** Roll Up Doors Direct door technicians and other technicians, installers and future maintenance staff comply fully with all safety information, procedures, and instructions contained in this manual. **Failure to do so could result in premature part/component failure resulting in serious injury or death to others** and, with respect to Roll Up Doors Direct door technicians, immediate termination of employment

Adjustments, part replacement, repairs, etc. must be performed by trained rolling door technician

ROLLING SHEET DOOR PERFORMANCE EVALUATION

- Rolling Door operation should be easy at/near the open and closed positions. Rolling Door may require more effort to open through the middle portion of travel.
- Rolling Door operation to the open position should result in bottom bar angle resting against head stops and remain in the open position.
- Rolling Door operation should not exceed 35lb. of force for hand chain operation, and 30 lb. for manual operation.
- Rolling Door operational balance evaluation:

If door operation is easy to close, but hard to open; spring tension needs to be increased

If door operation is hard to close, but easy to open; spring tension needs to be decreased

Spring tension adjustments must be made by trained rolling door technician. Refer to Rolling Door installation instructions for tension adjustment procedure.

▲ **WARNING: Extreme spring tension can cause serious injury or death** ▲

- Rolling Door electrical motor operation should be evaluated quarterly.
- Prior to Rolling Door electrical motor operation assure that doorway is clear and in full view before and during complete operation cycle.
- UL 325 requires constant pressure to close for doors without sensing edges or photoelectric sensors/eyes.
- Sensing devices should be tested at least weekly. Sensing edges should be tested at both ends to evaluate proper operation. Photoelectric eyes must be tested by breaking beam to evaluate proper operation.
- Evaluate operator limit setting at door travel open and closed positions. If operator limit setting has become out of sync with door open and close positions, refer to operator installation instructions to reset limits to an appropriate setting in relationship to door open and closed positions.
- If at any time during Rolling Door electrical motor operation, motor sounds like it is under excessive load or stress to open the door:
 - ▲ Close door using motor operator. Engage motors manual operation feature to manually operate the door to the open position.
 - ▲ If door operation is heavy, cannot be completely opened or hard to open and will not stay in open position; Spring Assembly counterbalance evaluation is required, which may require adjustment or replacement.
 - ▲ **Spring tension adjustments or repairs must be made by trained rolling door technician. Refer to Rolling Door installation instructions for tension adjustment procedure.**
 - ▲ **Determination of counterbalance repair must result in Rolling Door taken out of service until required repairs are complete.**

VISUAL INSPECTION

Guides:

- Guide fasteners must be present and secured in each existing hole/slot provided with fasteners supplied by Roll Up Doors Direct.
- Guides must not be bent, crushed, or damaged in a way that binds the curtain and/or bottom bar assembly at any portion of travel.
- Head stops must be securely fastened in place at top of guide to prevent bottom bar from traveling out of the top of the guides when rolling door curtain is fully raised to the open position.
- Inspect guide wear strip (when provided) for excessive cracking, tearing, wear or absence.

Curtain:

- During rolling door operation, curtain and bottom bar assembly must move freely inside guides and not contact header or ceiling.
- Latches, Step Plates, Slidelocks, windlocks, etc. (when provided) must always be securely fastened to curtain assembly.
- **Windlocks should never be removed from curtain.**
- Inspect curtain wear material or felt tape (when provided) for excessive tearing, wear, or absence.
- Inspect weather seals; Top Draft Stop, side draft stop, brush (when provided)

Brackets/Mounting Plates:

- All Fasteners must be present and secured with fasteners detailed in installation instructions.
- Brackets & Mounting plates (when provided) must not be bent, or damaged in a way that adversely effects the safe operation of door assembly.

Hood Assembly:

- When provided, all fasteners attaching hood endcaps, hood support (when provided), and hood to wall must be secure.
- Hood endcaps or hood must not be bent or crushed in a manner which binds the curtain thus hindering the proper operation of rolling door operation.

Chain Hoist Gears:

- Fasteners attaching all chain hoist components, & gears must be securely fastened.
- Visually inspect gears for broken, cracked, missing or extremely worn teeth.
- Clear debris from gear teeth.

Sprockets and Roller Chain Drive:

▲Sprocket misalignment will result in excessive wear and could cause roller chain to jump off of sprocket during operation or lead to premature failure of roller chain assembly.▲

- Visually inspect sprocket alignment between Rolling Door sprocket and output sprocket of motor operator. Align sprockets and tighten set screws as needed.
- Inspect roller chain for excessive wear or damage.
- Roller Chain Lubrication: SAE 20 oil to be used for service temperatures between 32° F and 104° F. Apply oil where chain tension is minimal.
- Check fasteners and tighten as required.

Tensioning Devices & Axle Supports:

- Fasteners attaching all tensioning devices and axle supports must be securely fastened.
- Set screws securing axle must be securely fastened.
- Inspect for components for damage or deformity.

▲Determination of tensioning device repair or replacement must result in Rolling Door taken out of service until required repairs are complete. Repair or replacement must be performed by trained rolling door technician▲

▲Product safety labels should be periodically inspected and cleaned by the product user as necessary to maintain good legibility for safe viewing distance

Product safety labels should be replaced by the product user when they no longer meet the legibility requirements for safe viewing distance. In any case where products have an extensive expected life or where exposed to extreme conditions, the product user should immediately contact Roll Up Doors Direct to obtain replacements.